



belulu® Smart

User manual (English)

Thank you for purchasing this product.
Please read this manual carefully before using and keep it well.

1 Safety precautions -In order to use safely-

Please read this [Safety precautions] carefully.

For you and others not to hurt. Represents the harm or damage caused by improper handling.

If you give or lend this product to the others, please give this Safety precautions.

[Display means]


Display	Means
	Danger
	The wrong way to use, makes people die or risk of serious injury.
	Warning
	The wrong way to use, possible to makes people die or risk of serious injury.
	Attention
	The wrong way to use, damage to the person or property.

[Picture display]

	[danger-warning-attention]
	[Prohibited matter]
	[The act of forcing and instruction]

Before use

Danger



- People who use these following medical electronics, do not use this machine
- Implantable medical electronic equipment
- Medical electronic equipment life support
- Medical electronic equipment mounted type
- Other medical electronic equipment
- * They may have caused the error.

Warning



- People who applies to the following
- Acute disease
- Febrile disease
- Tuberculous diseases
- Hemophilia disease
- Abnormal blood pressure
- Malignant tumor
- Infectious disease
- Heart disease
- Angina pectoris
- Multiple sclerosis
- Purpura, hemorrhage
- Skin cancer
- Skin abnormalities
- Pregnancy
- Lactation
- Epilepsy
- Facial neuralgia
- Keloid diathesis
- Atopy
- Excessive tanning
- Pustulent inflammation of acne
- Allergic constitution
- Rash experience
- Steroid hormone
- The head and eye have sequel
- Precision eye disease
- Infants and young children
- People who cannot control themselves
- During menstruation
- Other under treatment and abnormality in the body

Place-Power

Attention



- This product is not waterproof. Please do not use or charge in bathroom.
- Do not put it in a place where fire and high temperature & a place where direct sunlight.
- Do not use plug and code with dirt and rubbish.

Attention



- Please use the specified conditions (voltage, cable etc) Otherwise it will cause fire, electric shock, etc.
- In addition to charging, pull out the cable from the product and outlet. When pulling the plug, do not pull the code.

Prepare and use note

Attention




- Please use on the face.
- Please use the method of the safety precaution.
- Please follow the use of time.



- This product is household electric appliances, do not be used for commercial purposes.
- If the product and the code have any damage, please stop using it.
- Do not touch the machine and the code with wet hands.

Warning



- If the skin felt abnormal, please stop using it, please consult your doctor or contact our company.
- If the product abnormal, please stop using.

Attention




- Please follow the following rules when using.
- Please try once, make sure that there is no abnormality after use.
- Take down the metal products.
- Hair removal site, the day can not use.
- * May appear skin irritation.
- On the electrical, do not put the long time.
- Please press the all buttons before use.

Repair-Maintenance

Attention




- Do not put it in a place where children can touch.
- Please shut off the power when you clean the product.



- Do not break down or transform the product.

Warning






- Do not put it in high temperature & direct sunlight
- If you want to throw away the product, please follow the rules of the area where you live.



- Please do not use these things to clean the product, diluent, essential oil, gasoline, containing drugs, cleaning agents, hot water, etc.
- Please do not put the product around the hot machine.
- Please do not fall the product.
- Please do not wash with water.

2 supplied accessories and parts name

*Please be informed that accessories on packaging may change without advanced notice, based on different sales occasions.

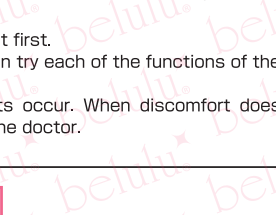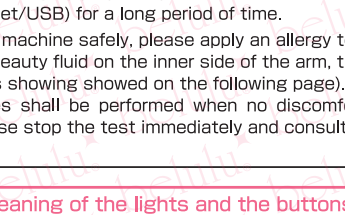


[Product Specification]
Charging Time: 4~8 hours
Input: 5V/0.5A
Battery type: Lithium-ion
Dimensions: 180x44x40(mm)
Weight: 146g

[User guide for the supplied AC adapter specification]
Power Input: 100~240V 50/60Hz 0.2A
Power Output: 5V/1A

3 CHARGING METHOD

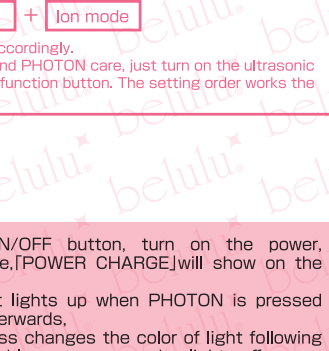


- When using the machine for the first time after purchasing or when it has not been used in a long time, the machine may react slowly, please fully charge it first.
- Insert the charging cable connector into the charging port, plug USB into a computer's USB port or AC adapter.
- When charging, [POWER CHARGE] lights up to show that the machine is charging.
- * During the charging process, the machine will generate some heat, which is normal.
- The charging time is inversely proportional to the residual energy, so the charging time is not necessarily the same each time.
- When the charging is completed, [POWER CHARGE] light goes out. Please unplug after the light goes out.
- Except for charging purpose, please do not leave the machine connected to power (power outlet/USB) for a long period of time.
- To use the machine safely, please apply an allergy test first.
- Apply the beauty fluid on the inner side of the arm, then try each of the functions of the product (as showing showed on the following page).
- Facial cares shall be performed when no discomfort occur. When discomfort does occur, please stop the test immediately and consult the doctor.



4 The meaning of the lights and the buttons

	LEVEL	Adjustable (the intensity of ion mode and working ultrasound mode)
	ION+/ION-	Different modes for ultrasonic mode (positive and negative ion mode)
	SONIC	Lights up when ultrasonic mode is on
	PHOTON	Turn on LED lights of photorejuvenation.
	ON/OFF	Power Switch
	HIGH	Lights up when the working intensity is set to [strong] under ultrasonic mode.
	LOW	Lights up when the working intensity is set to [weak] under ultrasonic mode.
	ION+	Lights up when positive ion export mode is on
	ION-	Lights up when negative ion export mode is on
	SONIC	Lights up when ultrasonic mode is on
	POWER CHARGE	Power switch, which lights up when the power is on or when the machine is charging.

Available combination of modes

	SONIC		POWER CHARGE	● generate a vibration at a low intensity.
	PHOTON			● Press LEVEL button to increase the intensity of the ultrasonic vibration will be generated. If the intensity is non-selected.
				● Press SONIC button on the ultrasonic mode.

Choose whatever functions at will, by pressing buttons accordingly.
For example, you want to make a combination of SONIC and PHOTON care, just turn on the ultrasonic mode and set the working intensity, then press PHOTON function button. The setting order works the same when reversed.

5 Basic Operation

PHOTON

- Press ON/OFF button, turn on the power. Meanwhile, [POWER CHARGE] will show on the display.
- Blue light lights up when PHOTON is pressed once. Afterwards, each press changes the color of light following the order: blue → green → red → lights off.
- * Please be informed that the order of lighting-up-LED has been set during production, based on relative programs.

SONIC

- Press ON/OFF button, turn on the power. Meanwhile, [POWER CHARGE] will show on the display.
- Press SONIC button to enter the ultrasonic mode. Meanwhile, [SONIC] will show on the display, however ultrasonic wave will not generate any vibration at that moment.
- Press LEVEL button to select the working intensity of the ultrasonic (HIGH or LOW) No vibration will be generated when working intensity is non-selected.
- Press SONIC button once more to exit the ultrasonic mode.

The working intensity of ion mode (Negative Ion Export Mode- Positive Ion Export Mode)

- Press ON/OFF button, turn on the power, [POWER CHARGE] will show on the display.
- Press ION+/ION- button to enter the ION mode, [ION+] lights up.
- With each press on ION+/ION- button, machine's working status will shift following the order: positive ion induct mode → negative ion induct mode → ion mode off.
- Under the negative ion induct mode, [ION-] lights up.
- To adjust the strength under ION+/ION- mode, press LEVEL button.

The diagram on left illustrates the steps when using positive ion induct mode. The diagram also apply to the situation when using negative ion induct mode.

Works better with ultrasonic mode (SONIC).

Cover the 3D massage head with facial puff first, then fasten it with rubber band.

Soak the facial puff with adequate beauty lotion.

Smear beauty lotion/gel/cream either on the 3D massage head, or directly on face.

Please use adequate beauty lotion/gel/cream when perform care, which helps the 3D massage head moving smoothly.

Steps of basic care: face washing → deep cleansing → moisturizing → PHOTON
Ultrasonic vibration could be added to the program when performing ion inducting/exporting or PHOTON irradiation, according to personal preference.

A common inquiry: Will feel a little bit of electric shock if use of this.
Not leakage. Metal parts of the product have a micro current.
This is in order to let the beauty liquid can penetrate into the inner layer of the skin.
Some people will feel this micro current, if worry can lower the ultrasonic.

[Precautions]

- Please keep eyes closed when using PHOTON function. Do not look directly at the LED light for too long.
- Beauty liquid must be applied when using the machine to perform ion inducting and other cares, otherwise it may damage to skin due to excessive friction caused by dry skin. (beauty liquid may not be used when performing PHOTON).
- Make sure you can touch the metal ion conduction strip at the back side of the machine during using process. When using.
- Please keep the flat surface of 3D massage head closely against the skin, and rub around gently during massaging for that excessive force could damage skin.

FACE CARE

left 2min right 2min Total 4 minutes

Other parts

After ordinary slide, slide the same route with circle. Do not put the 3D head into direct contact with the skin above the eyes.

After ordinary slide, slide the same route with circle. Do not touch with the 3D head.

After ordinary slide, slide the same route with circle. The central portion of neck is dangerous, so please do not touch with the 3D head.

We suggest that the user schedule cares according to your own need.

6 AFTER CARE

- Turn off the machine by press the ON/OFF button more than 2 seconds.
- Use hand to massage the beauty liquid left on face until they are absorbed.
- Re-moisture the skin by lotion and cream.
- Use soft cloth dipped with alcohol or tissue to wipe the 3D massage head.
- * Do not use thinner, oil agent to wipe.
- * Do not rinse.
- Please do not store the product under high-temperature, high-humidity or sunshine environment. Keep it out of reach of children.

Belulu Smart Q&A

- Q Why can't I feel vibration when using Ultrasonic Mode (SONIC) ?

A1 The vibration frequency of this product can reach 3 million Hz when under ultrasonic mode, which can neither be observed by naked eye, nor be felt. To see that the ultrasonic mode is actually functioning, just spray some water on the flat surface of 3D massage head and switch the machine to ultrasonic mode, then you will see little water drops bouncing around.

A2 For ultrasonic mode (SONIC), are there different working intensities to choose from? Yes. When under ultrasonic mode, the machine will not start working until a working intensity is selected. For more details, please refer to P.3 ultrasonic (SONIC).
- Q Could I use it every day?

A Even though this device brings an excellent cosmetological effect, frequent usage of this device might burden the skin. Therefore, to reach the best result, we recommend using it no more than 3 times a week. Similarly, following the time suggested in the steps of performing skin care is recommended.
- Q Is the beauty liquid a must to use?

A Toning lotion and cosmetic gel work the same. We recommend those products that have great permeation rate or high water solubility. For that ultrasonic can send cosmetic components deeply in the cortical layer through corneum without changing their original form (polymer), it is better to use highly-concentrated beauty products without additives. We strongly recommend our own beauty essence.
- Q What is the 3D massage head made of ?

A The surface of the 3D massage head is made of special steel, which is characterized by its scratch-resistance, corrosion-resistance as well as its "allergy-free" feature.

If you have any questions Please contact our company

JAPAN TEL : 045-227-5121 E-Mail : shop@kireido.com CHINA TEL : 0771-28752414 E-Mail : china@kireido.com