


belulu[®] Skin Checker

美ルル 肌チェッカー

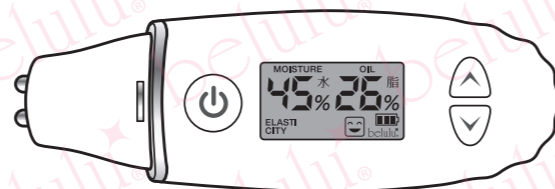

User manual

Thank you for purchasing this product.
Please read this user's manual carefully before using this product.
There is a guarantee certificate at the end of this document, so please make sure to store it in a safe place.

PLEASE READ BEFORE USING

Warning

- Please use the specified battery.
- If you notice any smoke, offensive smell, abnormal heat coming from the product, turn off the power and stop using it immediately
- Do not use this product if you find any problems with it, including any damages, faults, deformities, etc.
- Do not use this product with wet hands.
- This product is not waterproof specification. Do not use at the humid place such as bathroom. Burn and electric shock may happen.
- If the skin get abnormal, stop using it and please consult doctor or contact our company.
- The people applicable to below notice <Please confirm>, do not use this product.
- Do not decompose and transform, breakdown and damage will happen.

Attention

- Please avoid using on the weakness portion.
- Do not drop down and hit for purpose.
- Please do not use these things to clean this product, diluent, essential oil, containing drugs, cleaning agents, water etc.

[Please confirm]

This product measures with weak current. (It is very weak and not giving a stimulus to the body. It has no effect on pregnant women and fetuses)
People who use medical electronics, do not use this product.
※ They may have cause the error.

Function introduce

This product is checking the skin and supporting Skin care at the home.

The results can be seen at the moment

It is easy to see skin condition with large numbers and emoji.
The screen turned red and green based on the results.

Measure level of moisture and oil contents

This product can measure only pushing to skin, the level of moisture and oil contents with %.

Measure skin elasticity


The product measure about smooth textured skin and firm skin
The result shows in 3 levels.

Save the data automatically

This product save the data 10 times automatically.
The past results can see pushing the data check button.
It is possible to see the change of skin condition firmly.


Product Specifications

※ It changes without notice

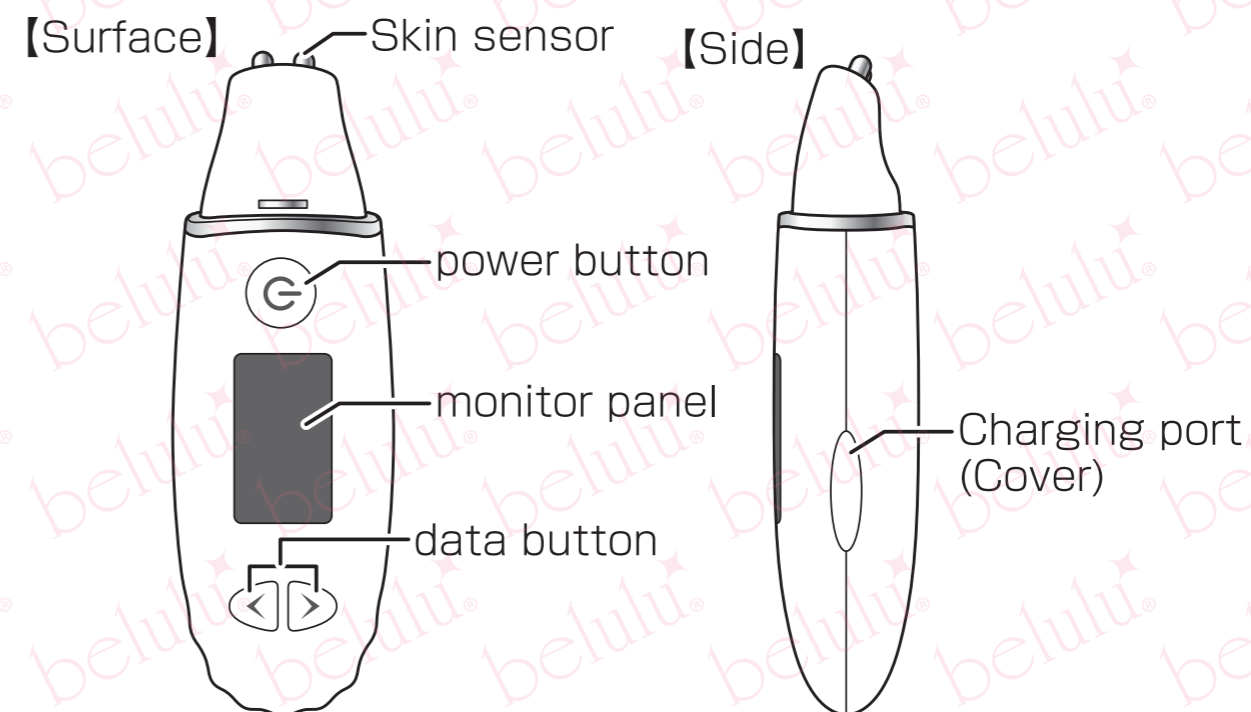


充電

The charge notification is lower right in the display. Please charge when the remaining battery is 1 or 0.

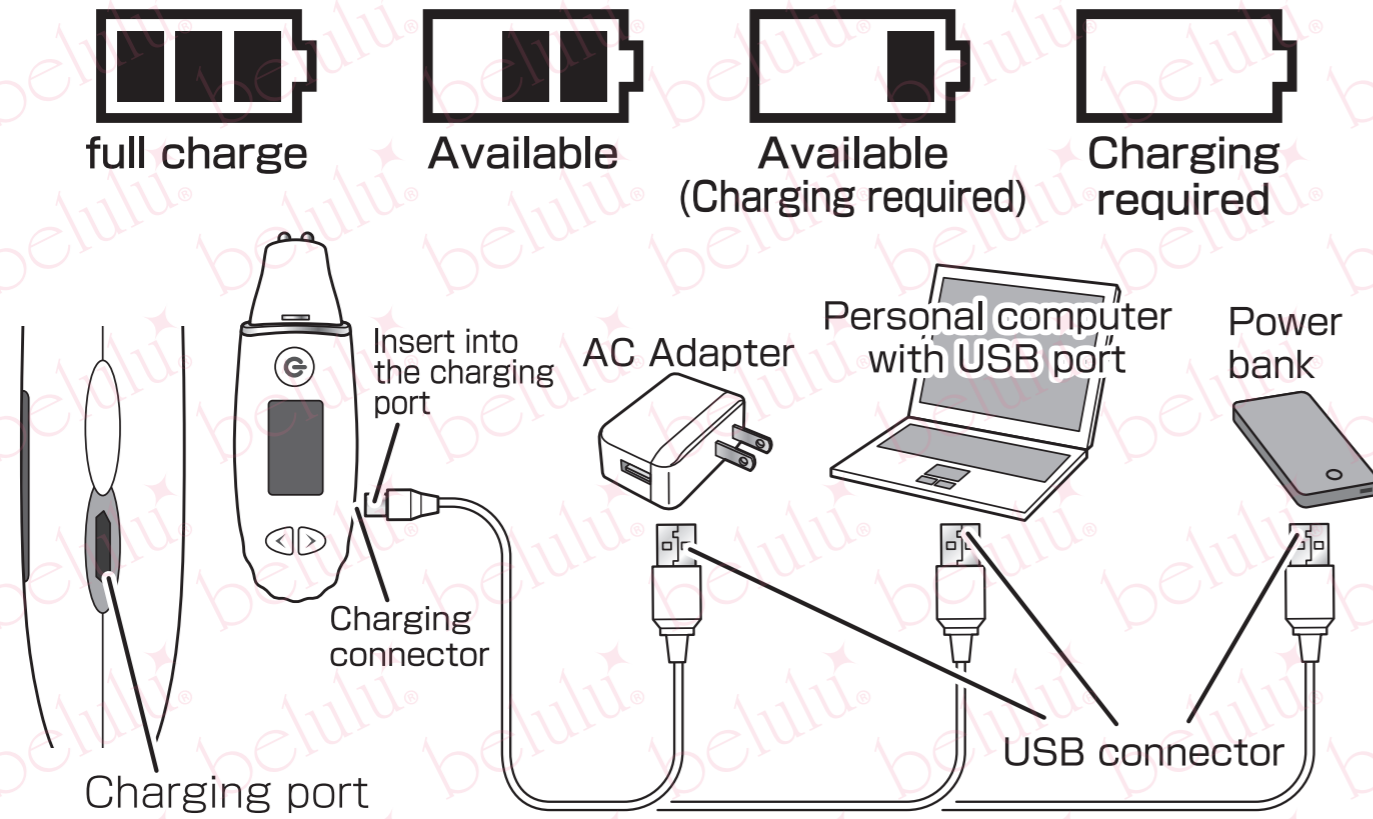

- Make sure to charge the product in the following situations: if you are using the product for the first time after purchase, if you have not used it for a very long time, if its power seems low, or if it seems to work for short periods of time.
- Insert the charging cable's connector into the device's charging port and insert the AC adapter into a household power outlet.
- The charge notification icon blinks while charging.
- ※ The device may become slightly hotter while charging; however, this is normal.
- The charging time and operating time will vary depending on how frequently the product is used.
- The charge notification icon blinking stops when the product is fully charged. Make sure to disconnect the cable once charging is complete.
- This product cannot be used while connected to the charging cable. Make sure to check that the charging cable is disconnected when using the product.
- The most suitable room temperature for charging is 15°C to 30°C. Charging the product at low temperatures may shorten its battery life, so make sure to charge the product at the appropriate temperature. In addition, the product's charging speed may decrease at approximately 0°C or less.
- In order to protect the built-in battery, make sure to charge the product once per month even when you are not using it for long periods of time.
- If the product's operating time seems short even though it has been charged correctly, the cause of this is likely to be the battery life.

Screen display

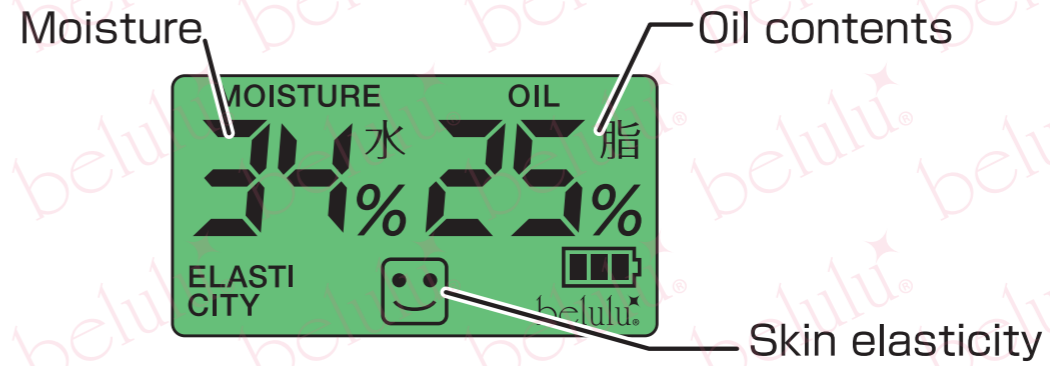


Icon			
Skin condition	Rough skin texture and the firmness is lost.	Firm skin texture and good elasticity.	The texture is good condition and the firmness with plump.

【Skin condition and display coloring】


The screen color changes depend on the level of moisture, oil content, and elasticity.

Good condition is green, need improvement condition is orange, bad condition is red.


The picture of below is example, the monitor display changes by the skin condition.

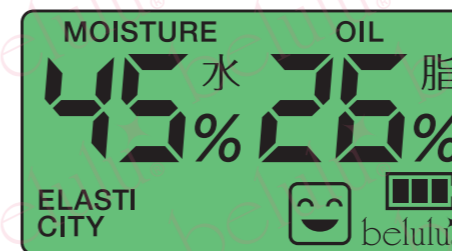


This is ideal skin condition. Please trying the care according to skin conditions.

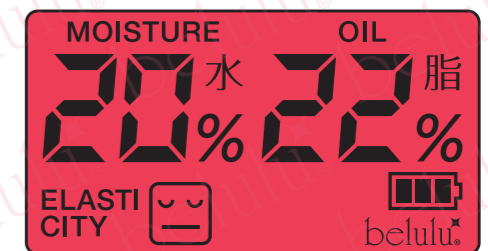

This is dryness. Please moisturize thoroughly and cover the skin by using cream prevent evaporation.

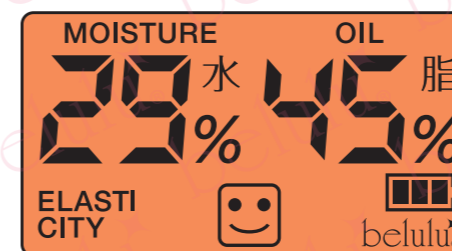


This is internal dryness. Please moisturize thoroughly and do not clean the oil too much.

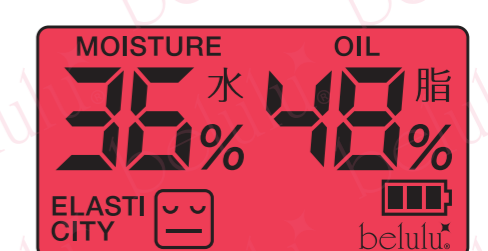


This is oily. Please take off the oil moderately and moisturize with skin toner

Measuring the skin condition




To get accurate the results, with no sweating under suitable temperature, no makeup, and avoid measuring on body hair.

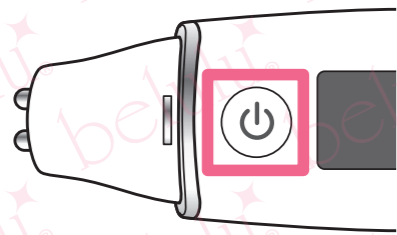

① Take off the cap and turn on the device.

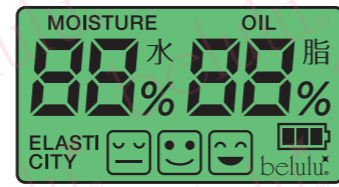


② It sounds 'beep' and power on. The screen color changes green, orange and red. And all icons are displayed.

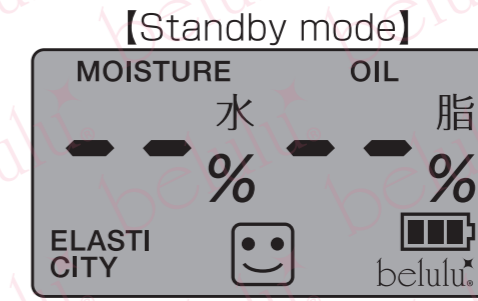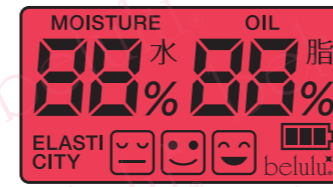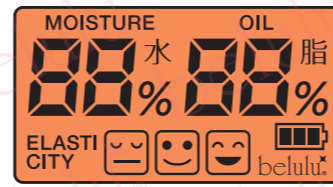


③ Once the screen light tunes off, you can start to measure. The icons are moving.




The device applied to skin and waiting 5 seconds. Measuring is finish with the sound 'beep'.

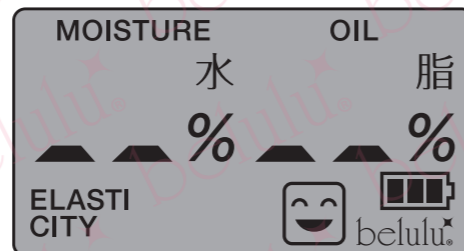

The line is spinning clockwise when this product measuring the skin condition. Also, the icons are moving.

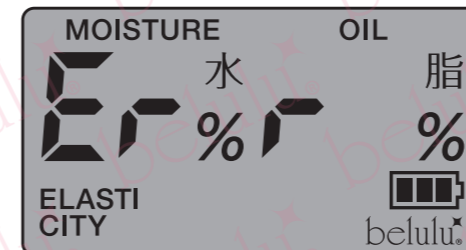


Weakness pushing to skin or dividing early from skin cause error. Please push the power button and try again.

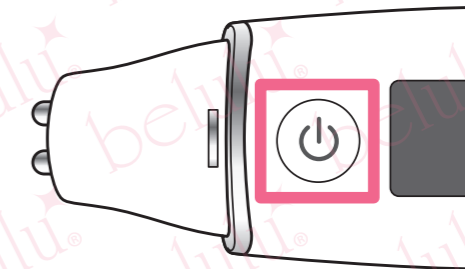

How to turn off the product is to push the power button over three seconds.

※ It turns off automatically after one minute.

How to see the past data

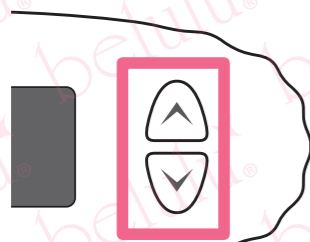

Please turn on the product and then push the data button.



The 1st data will be displayed by pushing「^」button. (Max 10 data)

● When this product saves over 10 cases, it will overwrite from the oldest.




The last data will be displayed by pushing「v」button. (Max 10 data)

【Indication of balance of moisture and oil content】

The ideal balance is moisture : oil=8:2 and moisture is 40~50%
Skin trouble will happen when the balance disturb.
It is the good way to know skin condition, and caring correctly.

The number changes environment (season, temperature, humidity)
The tendencies are summer is oily and winter is dryness.

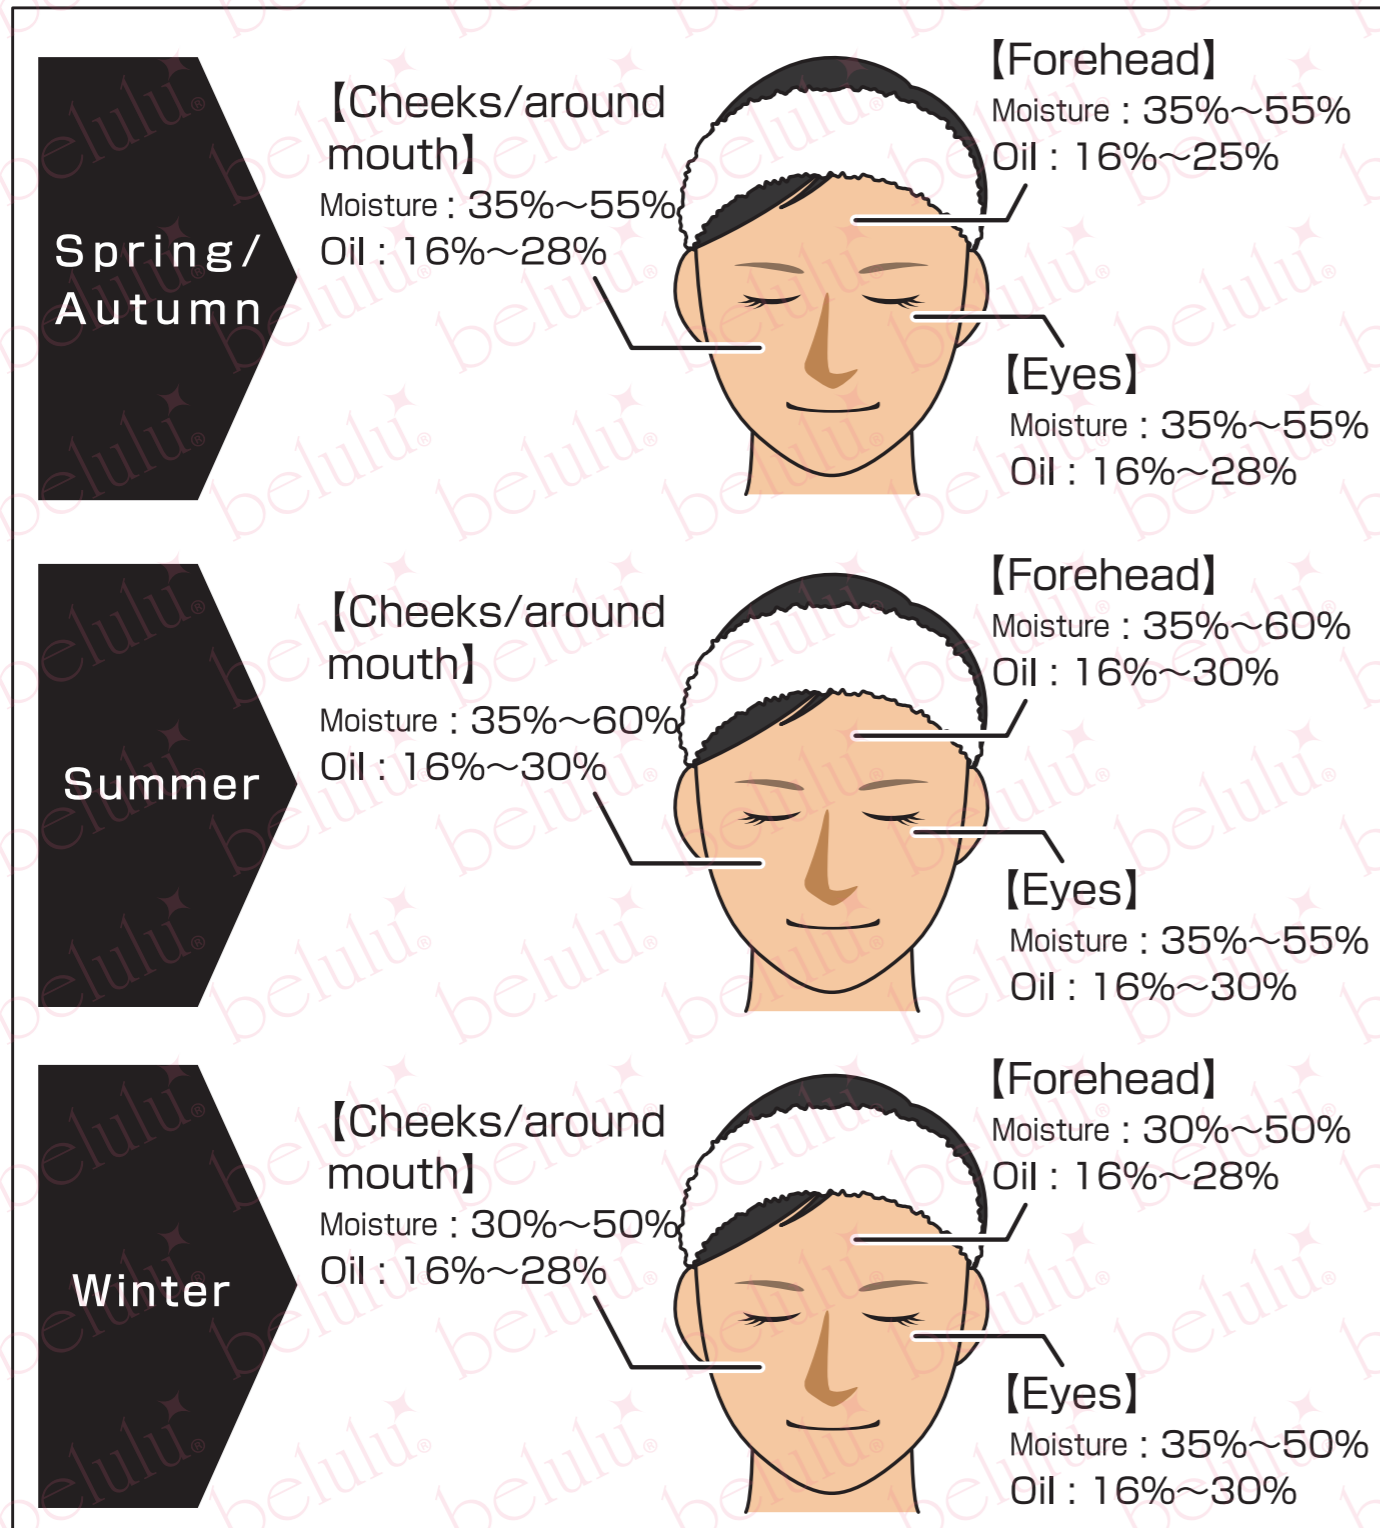

After using

- Press the power button to turn it off.
- If this product is dirty, use a damp cloth to clean it and keep clean.
- Avoid storing in places with high temperatures, high humidity, or under direct sunlight, as well as places that are highly dusty or within the reach of children.

If you have any questions or concerns,
please feel free to contact us.

JAPAN: info@kireido.com
CHINA: china@kireido.com